


Installation M-5100


► INSTALLATION

- Clean and flush existing gutters and downspouts.
- Move the «J» molding 6" to 8" from the Gutter Clean System.
- Cut the «J» molding or fill the space with a section of Gutter Clean System.
- Place the Gutter Clean System on top of the gutter with vinyl strip against fascia or drip edge.
- Fasten the front part every 24" (60 cm) using #6 3/8 screws.
- Push the «J» molding against the fascia or drip edge.
- Secure the «J» molding into place with a screw on the Gutter Clean System (perforated section). 1 screw every 36".

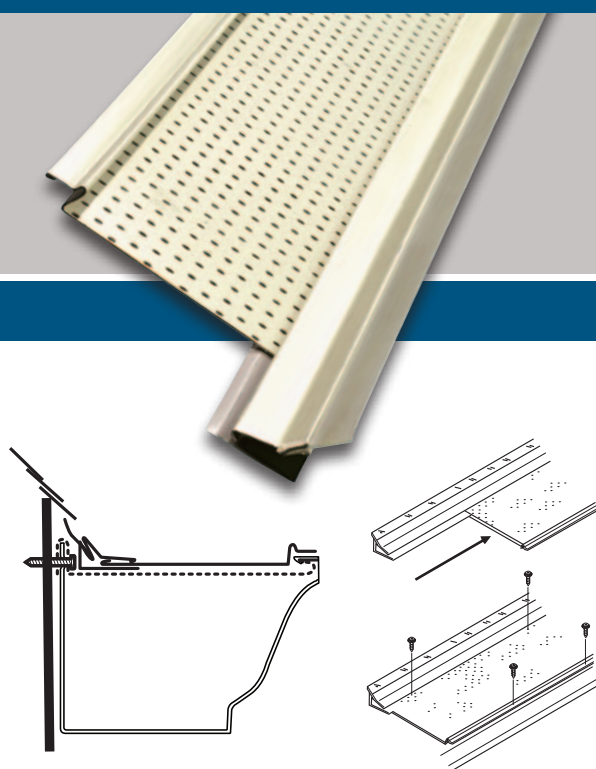


► OVERLAPS

- Make sure the overlap of the Gutter Clean System (perforated section) is at least 6" to 8" away from the «J» molding joint.
- The stronger part of the Gutter Clean System (perforated section) must be placed under the weaker one. It is the stronger part that is held in place by the spike or hanger nearest the overlap. For example, part A goes under part B since the spike or hanger under part A is closer to the overlap.
- Fasten both sections with a screw.

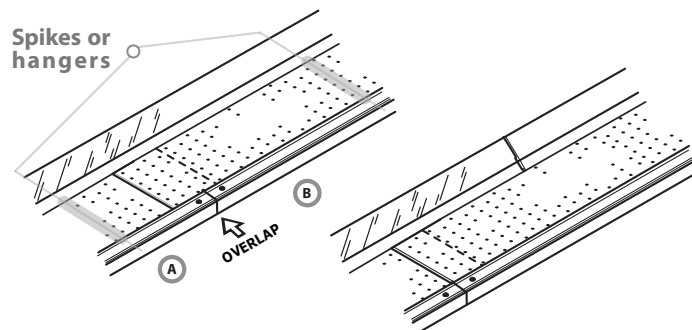


► END CAP

- Stop the sections in the inside of the end cap so that water is stopped by the end cap.

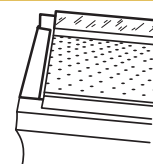

► CORNERS

- For corners, cut sections at a 45° angle. Make sure sections are overlapping by 1" (2,5 cm).
- Fasten both sections with a screw.

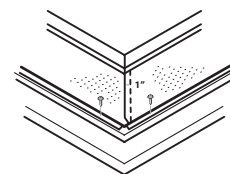

► IMPORTANT

- Install a water diverter in valleys and inside corners on the top of the Gutter Clean System, as shown.
- Downspouts 3" x 3" (70 x 70 mm) or 3" x 4" (70 x 110 mm) are required in a coniferous tree zone.
- Do not install over screw-on hanger

